

Eachine E010 "tiny whoop"

Algemeen:

CH 1	Aileron/Roll
CH 2	Elevator/Pitch
CH 3	Throttle
CH 4	Rudder/Yaw
CH 5	not used
CH 6	LTRIM or RTRIM Flip mode
CH 7	not used
CH 8	not used
CH 9	Headless mode
CH10	Return to home (RTH)
CH11	not used
CH12	not used

Setup file

Mix 0 = normal rate

Mix 1 = roll/pitch expert, yaw normal

Mix 2 = roll/pitch/yaw, expert mode

FMD 0 = Normal flight mode

FMD 1 = Headless mode (first calibrate both sticks to center bottom position)

FMD 2 = RTH (Return to home) (flip to FMD 2 and back again to FMD 1)

Left trim and/or Right Trim (+ or – button) = Flip mode

Rudder D/R = safety switch: Throttle disabled.

If rudder enabled, the rates of pitch/roll (ail/elev) are set to 100 in order to be able to calibrate the H8 (sticks lower left and lower right)

Trims enabled. The trim buttons of the opposite stick are used. E.g. the left_h stick trims the horizontal right stick.

Gear switch: If switch enabled (GEAR1) the trainer port is triggered in stick mode.